
LIGHTHEAD USER MANUAL 012 PRO

WIRING

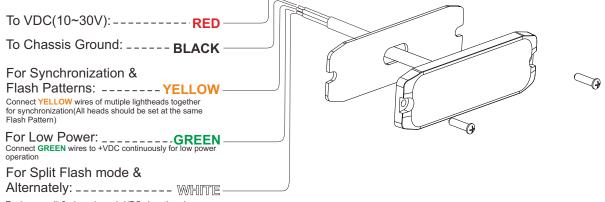

To change split flash mode,apply VDC+ less than 1 sec and release.

OPERATION

 
For Simultaneous/Alternation Flash And Split Flash Mode:

- 1. Apply WHITE wire to +VDC less than 1 sec and release then change to the Group.
 - Heads of the same Groups will flash together.
 - · Heads of different Groups will flash alternately.
 - · Split Flash Mode





35



III 104

#3 & #4 Left-Right

#1 & #2 Top-Down

#5 & #6 Criss-Cross

For Flash Partterns:

Momentarily apply +VDC to YELLOW wire once for next pattern. Keep YELLOW wire and +VDC connect more than 3 sec for FP#1.

NOTE: This unit may not be factory set at FP# 1.

#	Flash Patterns			
1	Single(R65)	14	Double(2HZ)(SPLIT)	
2	Double(2HZ)	15	Triple(2HZ)(SPLIT)	
3	Triple(2HZ)	16	Quad(2HZ)(SPLIT)	
4	Quad(2HZ)	17	Single(SPLIT)	
5	Single(SAE)(ALL)	18	Double(SPLIT)	
6	Double(SAE)(ALL)	19	Quad(SPLIT)	
7	Quad(SAE)(ALL)	20	Quint(SPLIT)	
8	Quint(ALL)	21	Nonuplet(SPLIT)	
9	Nonuplet(ALL)	22	Single to Quad(SPLIT)	
10	Single to Quad(ALL)	23	Steady Half 1	
11	Rotator Fast	24	Steady Half 2	
12	Rotator Slow	25	Steady ALL	
13	Single(2HZ)(SPLIT)			

#	FLASH MODES	GROUP
1	Left-Right(default)	Group A
2	Left-Right	Group B
3	Top-Down	Group A
4	Top-Down	Group B
5	Criss-Cross	Group A
6	Criss-Cross	Group B